



Installation Guide

Cisco 1941



What's in the box?

(Pictures are representational only: exact model may vary slightly)






Connection Instructions:

1. If required, attach the mounting kit to the router, and mount in cab (optional)
2. Connect the power using supplied power cable (known as a kettle lead)
3. Ensure power switch is turned on (the I is pressed down as below)



4. Connect a patch cable between the G0/1 port on the Cisco router and the provider/carrier NTE. The actual NTE will vary between carriers and circuit types, however there should typically be a port/section called “internal” or “local”, often with several ports bunched together
5. Connect a separate patch cable between the G0/0 port on the Cisco router and the customer switch (can be done at a later date if a migration from existing services is required)

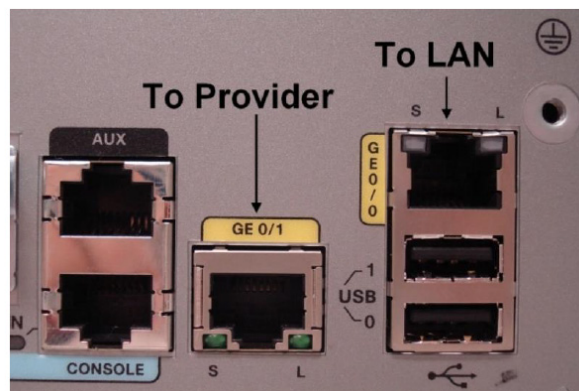

Once connected, a call must be placed to the GCI Provisioning Team to ensure successful turn-up and test of the circuit and router. Please ensure you have the description (including site name) from the white label affixed to the router to hand.

The provisioning team can be reached on 01924 641 296 or 0844 443 3537 option 3

Failure to call in to have the router commissioned remotely, even if customer testing on site is successful may impact your levels of ongoing support at this site.

For further information please contact your account manager in the first instance or our helpdesk as below:

Email: service.desk@gcicom.net | **Service desk direct dial:** 0844 443 3538